

SEIKI™

50" 4K ULTRA HD SMART TV SC5000US



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Installation	8
Controls and Connections	10
Remote Control	12
Basic Operations	15
Tuning your TV	16
Menus	
Picture	17
Audio	17
Lock	18
Network	18
System	19
Streaming Apps	20
Media	21
FAQs	22
Specifications	23
Customer Helpline	24

GENERAL SAFETY

Read this manual thoroughly before you start using the TV.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock.

This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Using Cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the television or its controls and to call for an adult to assist.

GENERAL SAFETY INSTRUCTIONS (Cont.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.
- Danger of explosion if battery is incorrectly placed. Replace with same or equivalent type.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this TV set, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- Do not allow anything to rest on or roll over the power cord and antenna cable. Doing so may cause a fire or an electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this TV during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the wall socket.

GENERAL SAFETY INSTRUCTIONS (Cont.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

WARNING!

It is STRONGLY RECOMMENDED that you ANCHOR this product.

Toppling furniture and TV's can cause serious injury or death.

TO HELP AVOID ANY SERIOUS OR FATAL INJURY, WE STRONGLY RECOMMEND THAT THIS PRODUCT BE PERMANENTLY FIXED TO THE WALL OR OTHER SUITABLE SURFACE. FIXING DEVICES ARE NOT INCLUDED SINCE DIFFERENT SURFACE MATERIALS REQUIRE DIFFERENT ATTACHMENTS. PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT WHAT FIXING DEVICE TO USE.

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the television on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

GENERAL SAFETY INSTRUCTIONS (Cont.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the TV set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the TV set.
- The antenna must be installed away from high-voltage power line,
- Please contact an antenna professional installer to install the antenna to avoid incorrect installation which could result in fire, electric shock or serious injury.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.
- If mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



“HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.”

INSTALLATION

Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer.

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

 
Attaching the stand

Step 1

Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right.

Step 2

Align the stand leg to the installation point, as illustrated below

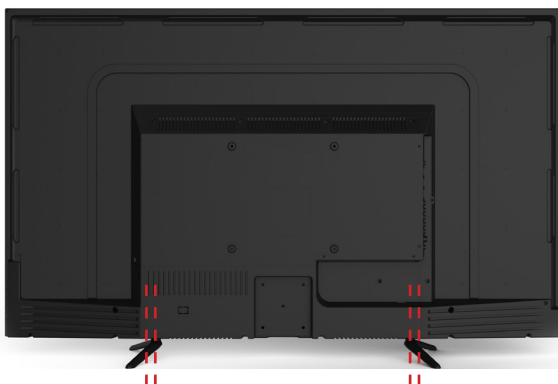

Step 3

Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated on the right.

CAUTION!

Do not apply excessive force as this may damage the screw holes.

INSTALLATION (Cont.)

 
Wall-Mounting Instructions

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

- We recommend you use a professional installer as we assume no liability for any eventual damage to the product or injury to yourself if you mount the TV on your own.


BACK OF TV

VESA PATTERN: 200 x 200mm

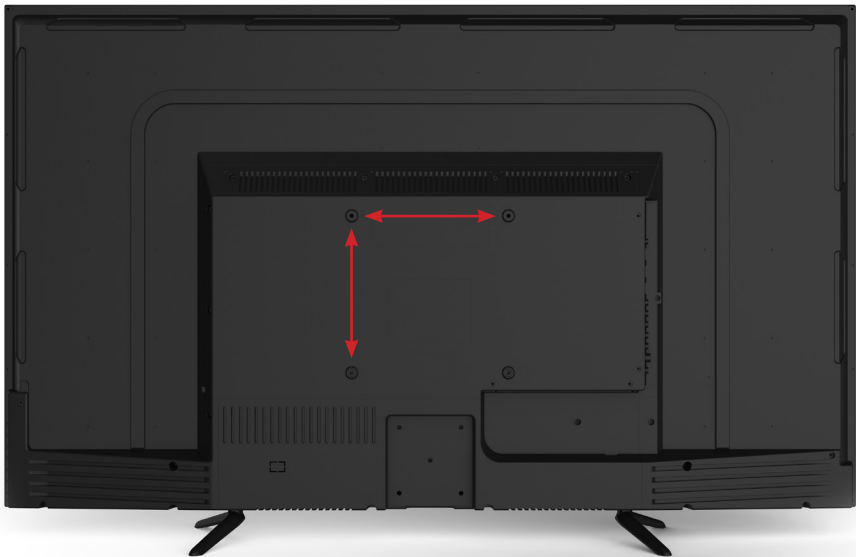


NOTE: If you are wall-mounting the TV, this should be done by a qualified installer.

 CONTROLS AND CONNECTIONS

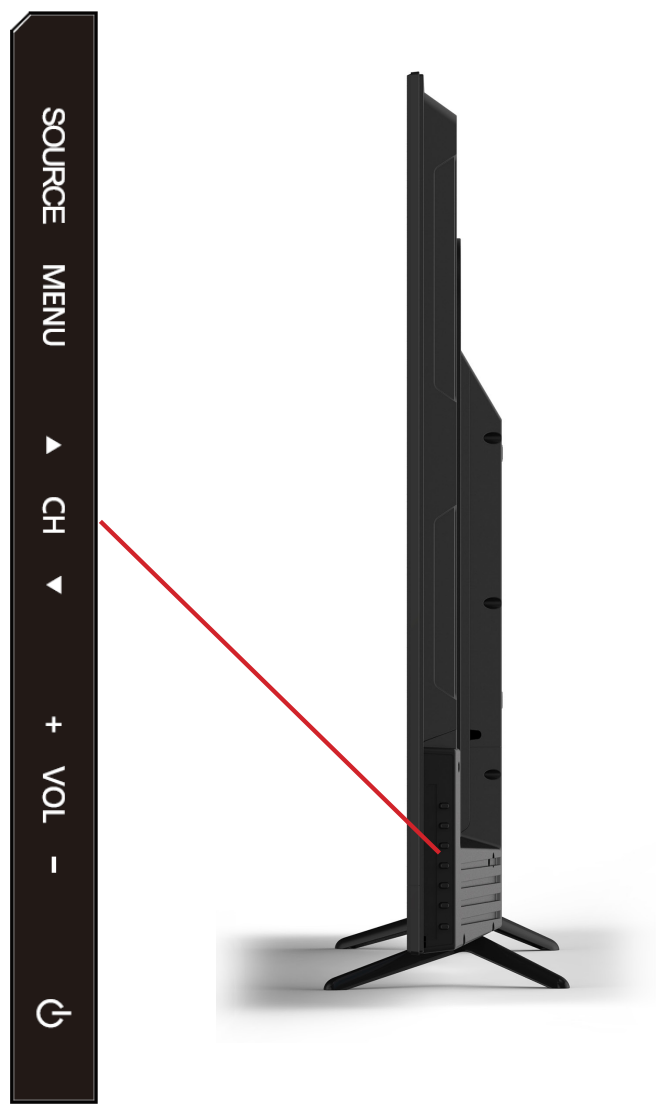

CONTROLS AND CONNECTIONS (Cont.)

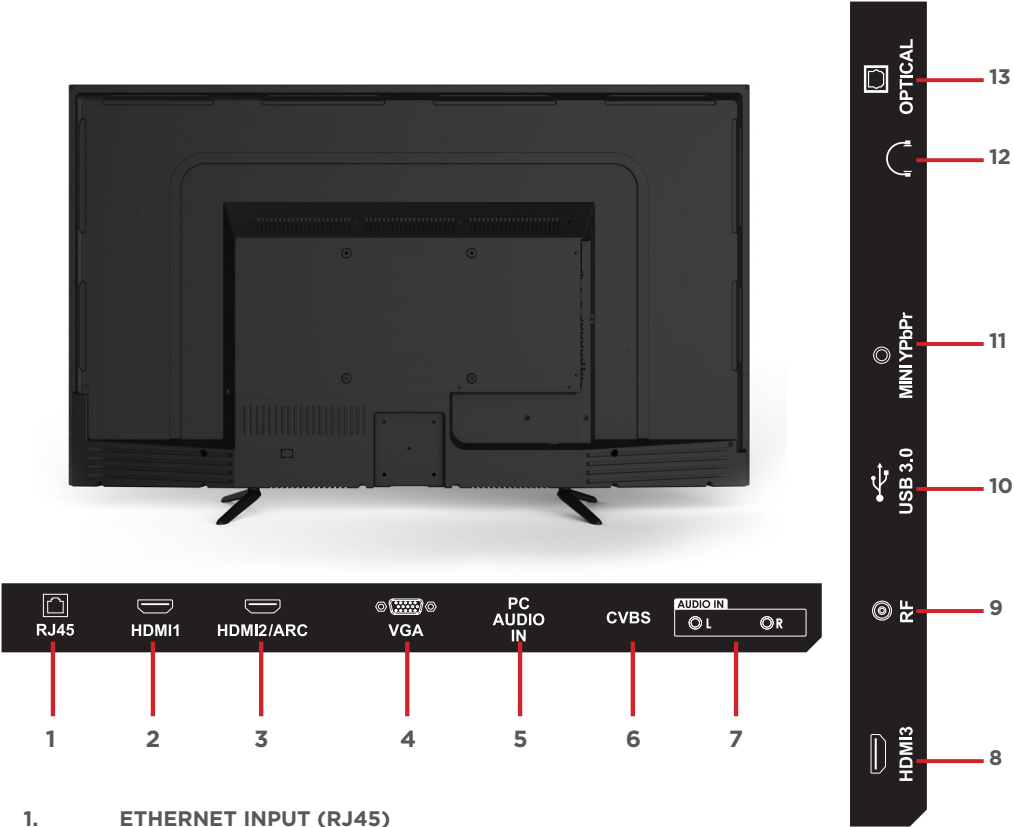 


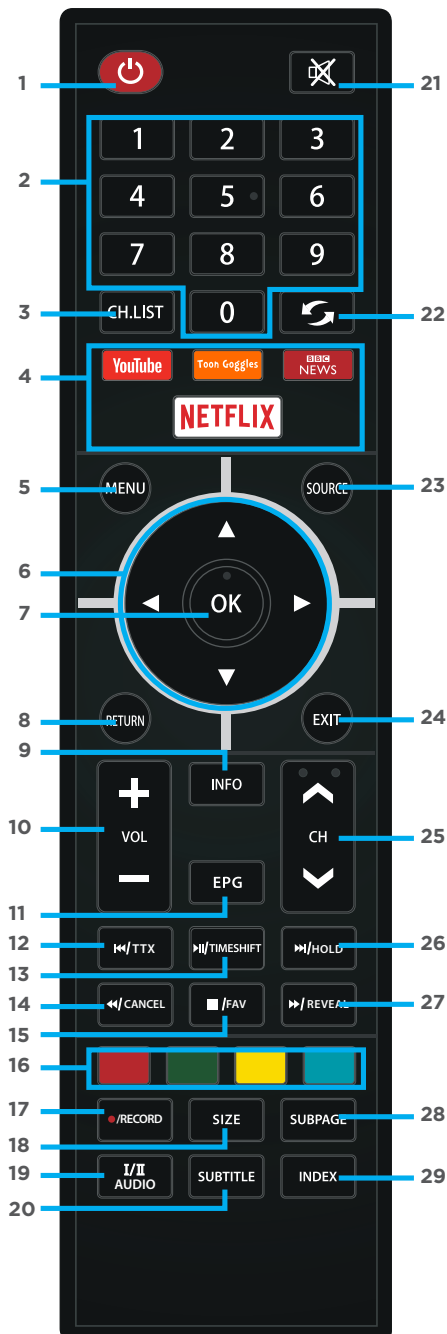 
- 1. ETHERNET INPUT (RJ45)
- 2. HDMI 1
- 3. HDMI 2 (ARC)
- 4. VGA INPUT
- 5. PC AUDIO INPUT
- 6. CVBS
- 7. AUDIO L&R INPUT
- 8. HDMI 3
- 9. ANTENNA (RF)
- 10. USB 3.0 INPUT
- 11. MINI Y/PB/PR INPUT
- 12. EARPHONE
- 13. OPTICAL

USB connection

 
Insert a USB storage device into the USB port to record, playback of video/music/photo

REMOTE CONTROL

1. **POWER:** ON/OFF
2. **NUMBER BUTTONS (0-9):**
Select a TV channel
3. **CH.LIST:** List of channels.
4. **APPS:** Direct access to apps.
5. **MENU:** Display Menu
6. **◀/▶/▲/▼:** RIGHT/LEFT UP/DOWN
buttons to navigate the on-screen
menus
7. **OK:** Select current option that's
highlighted.
8. **RETURN:** Return back to previous menu.
9. **INFO:** Display Channel Information
10. **VOL +/-:** Turn the volume up/down
11. **EPG:** Launch the Electronic
Program Guide
12. **Previous / TTX:** Go back a song or title.
13. **Play/Pause / TIMESHIFT:** Pause, rewind
and play live TV. (USB is needed for this
function to work).
14. Rewind / Cancel
15. Stop / FAV
16.  : Corresponds to
various colour functions in the menu
or teletext.
17. **Record:** USB storage device must
be inserted to record DTV channel/
program. (not included)
18. **SIZE:** Change the size of display in
Teletext mode.
19. **AUDIO:** To change audio soundtrack.
20. **SUBTITLE:** Enable/disable subtitles.



REMOTE CONTROL (Cont.)

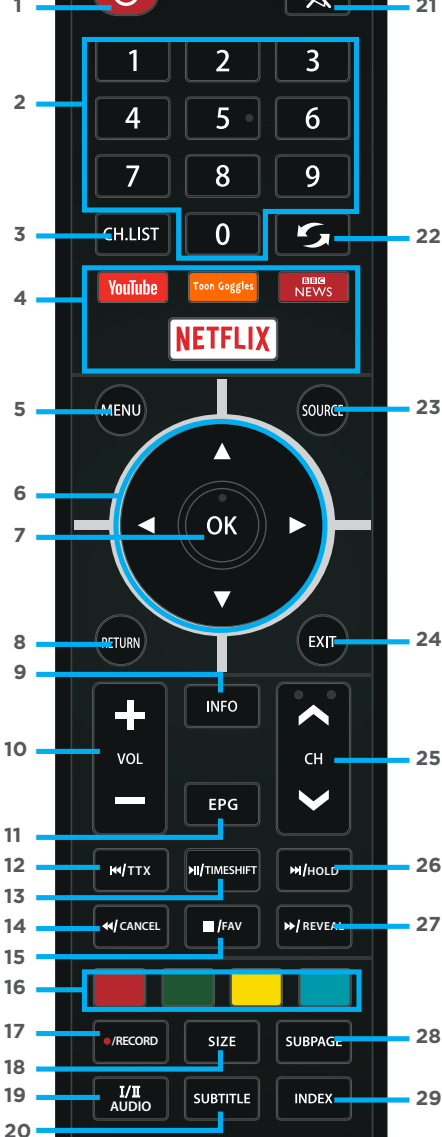21. **Mute:** Mutes the sound.
 22. **RECALL:** Return to the previous channel.
 23. **SOURCE:** Select the input source.
 24. **EXIT:** Exit from the main menu
 25. **CH+/-:** Press to play the next or previous channel.
 26. **NEXT / HOLD:** Freezes the current picture in the Teletext.
 27. **Fast Forward / REVEAL:** Press REVEAL to display or hide hidden teletext information (depends on broadcast).
 28. **SUBPAGE:** Press to display the subpage on the teletext screen.
 29. **INDEX:** In DTV mode, access the listing of recorded programs. (must have USB storage device connected).
- 
1. Power button
2. Numeric keypad (1-9)
3. CH.LIST button
4. YouTube, Toon Goggles, Cartoon News, Netflix buttons
5. MENU button
6. Directional pad (Up, Down, Left, Right) and OK button
7. OK button
8. RETURN button
9. EXIT button
10. VOL + and - buttons
11. INFO button
12. TTX button
13. TIMESHIFT button
14. CANCEL button
15. FAV button
16. Color buttons (Red, Green, Yellow, Blue)
17. RECORD button
18. SIZE button
19. I/II AUDIO button
20. SUBTITLE button
21. Mute button
22. RECALL button
23. SOURCE button
24. EXIT button
25. CH+/- buttons
26. NEXT / HOLD button
27. REVEAL button
28. SUBPAGE button
29. INDEX button

REMOTE CONTROL (Cont.)

Using the Remote Control

- Battery should normally last for about one year.
- Do not mix old and new batteries in the remote
- Do not use different types of battery
- If you do not intend to use the unit for a long time, please remove batteries from the remote to avoid accident.
- Keep batteries away from children and pets.
- Never throw batteries into a fire.
- Do not drop, or impact the remote control as it void warranty immediately.
- The remote control operate at a range of 5 to 6M effectively
- Do not expose the remote control sensor to a bright light.

BASIC OPERATIONS

 
- Press the **SOURCE** button to display the input source list.
- Press the ◀ ▶ buttons to select the input source, and then press OK to confirm.
- You can access connected USB drives by selecting MEDIA.



TUNING YOUR TV

AUTO TUNING YOUR TV:


- Press the MENU button for the below menu to appear.
- Use the directional arrows on your remote control and go to “Setup”.
- Then select “Channel” to access channel options and “Auto Scan” to tune your channels.

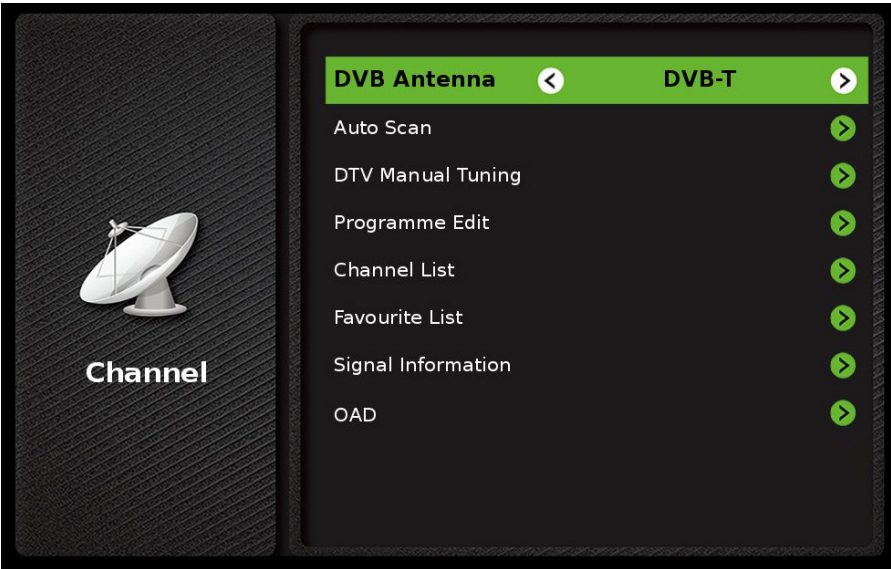

MENUS


PICTURE

 To access PICTURE settings, press the **MENU** on your remote control, go to “SETUP” and go to PICTURE.

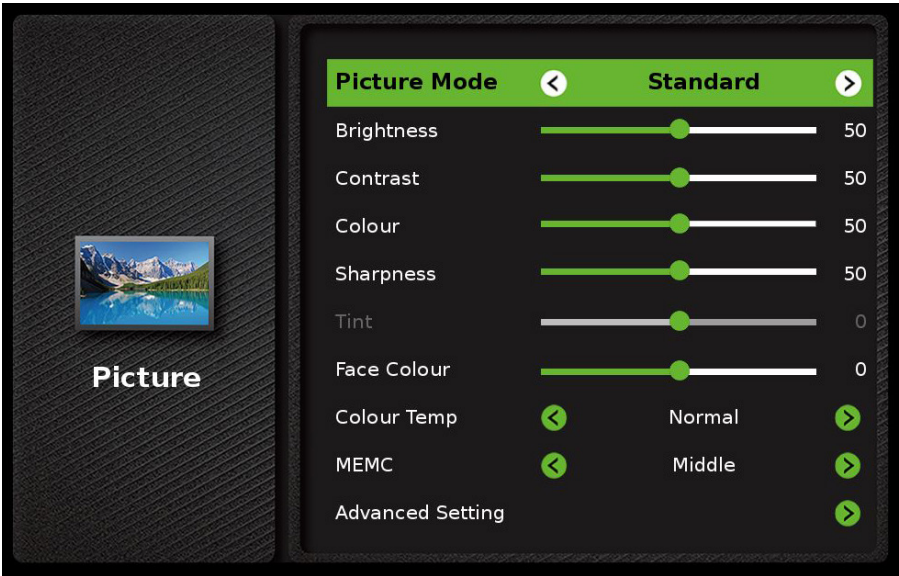

AUDIO

 
To access AUDIO settings, press the **MENU** on your remote control, go to “SETUP” and go to AUDIO.

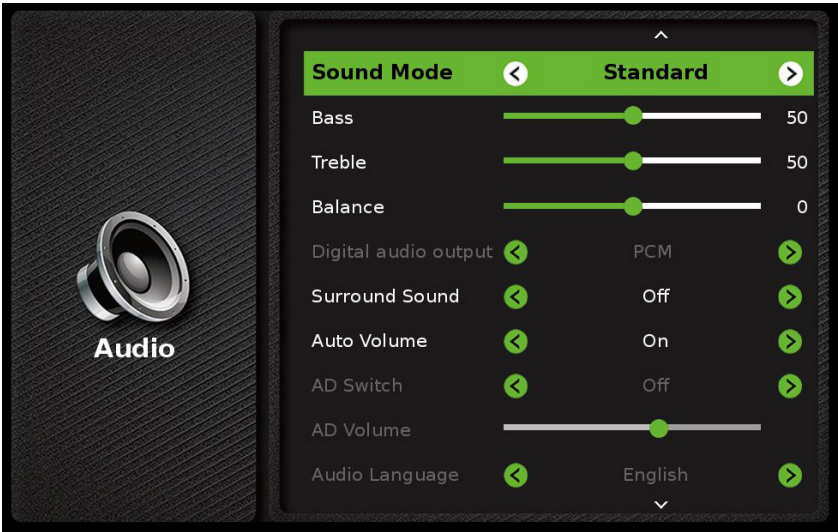

MENUS (Cont.)


LOCK

 To access LOCK settings, press the **MENU** on your remote control, go to “SETUP” and go to LOCK. **NOTE:** the default password is “3758”

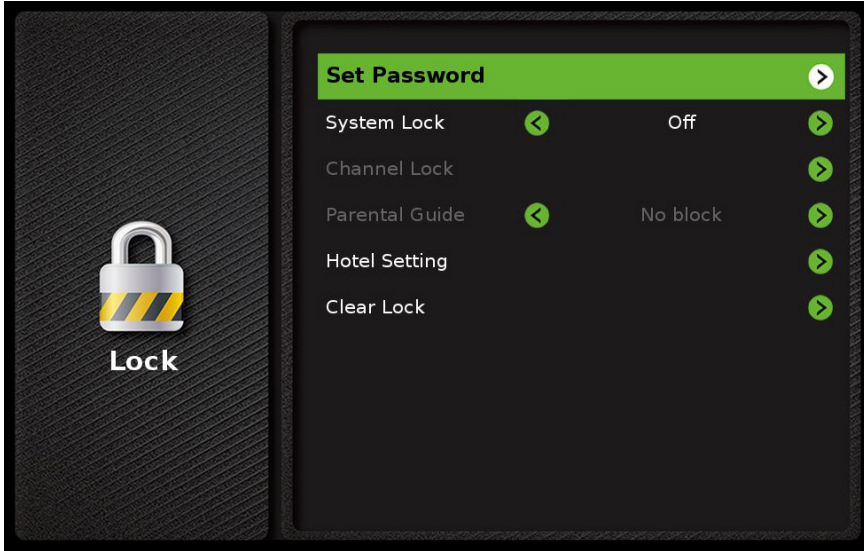

NETWORK

 
To access NETWORK settings, press the **MENU** on your remote control, go to "SETUP" and go to NETWORK.

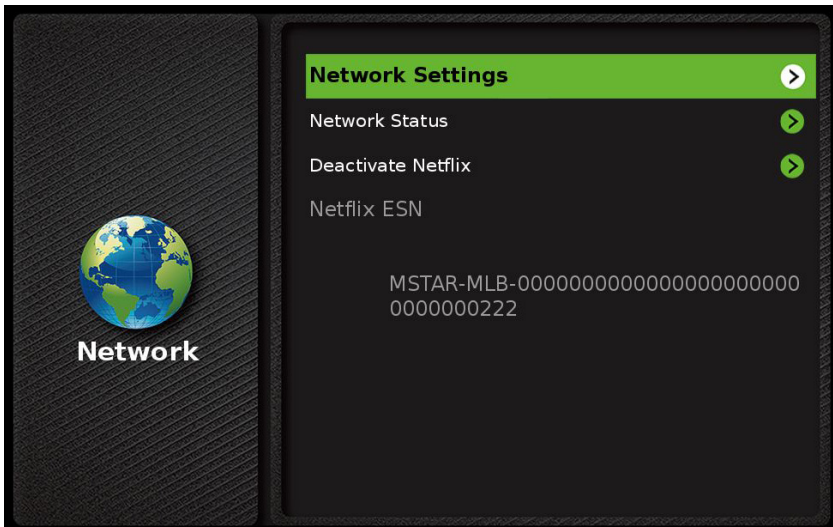

MENUS (Cont.)


SYSTEM

 To access SYSTEM settings, press the **MENU** on your remote control, go to “SETUP” and go to SYSTEM.

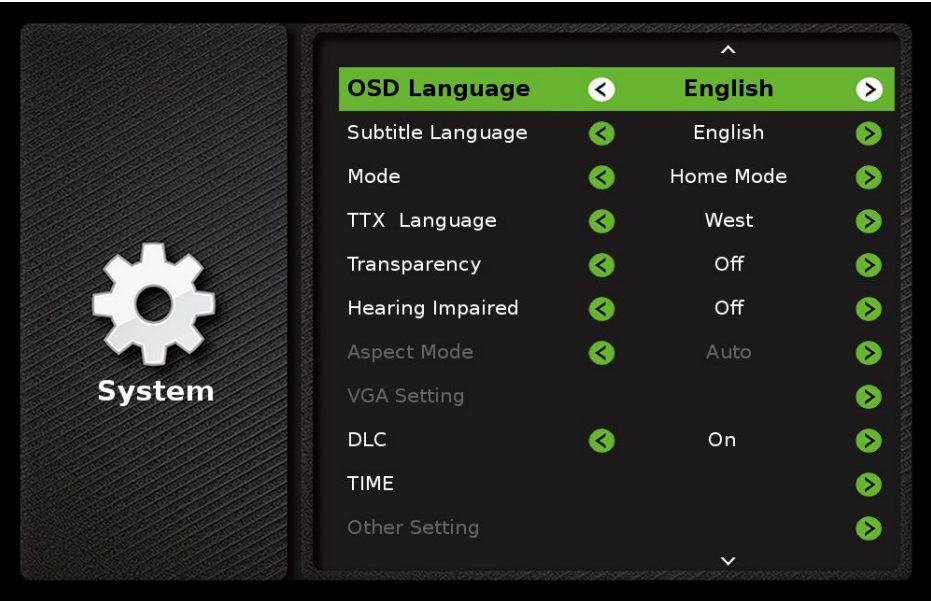

STREAMING APPS

 
To access your streaming apps, Press “MENU” on your remote control, then go left to “APPS”. To select which app you want to open, go up into the selection of apps and using the left or right directional arrows you can go through the apps that are built into your TV.

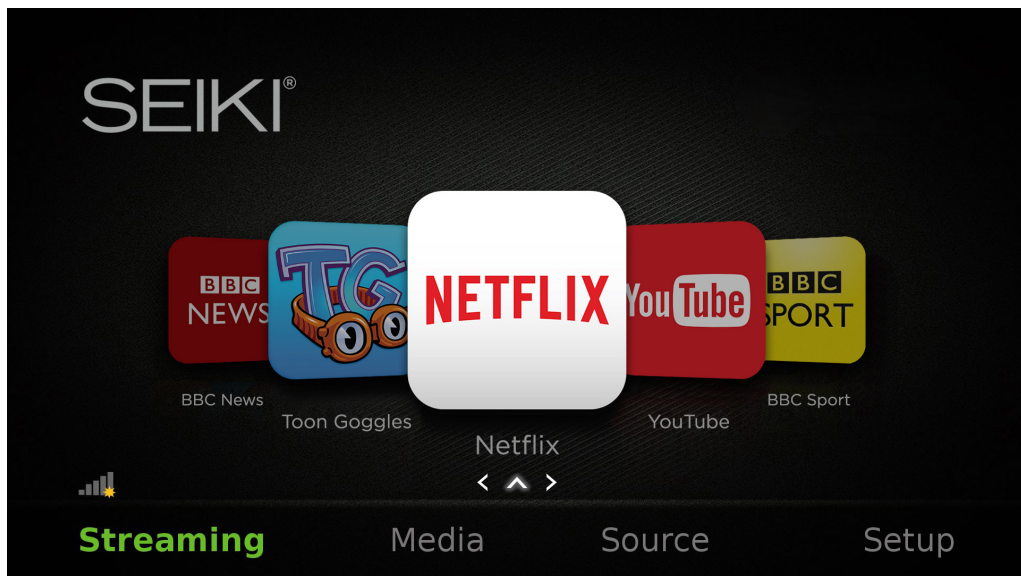

MEDIA

Media is used to access all files in USB devices.

 Access this area to play any music, photo's or videos that you have stored on your USB storage device.

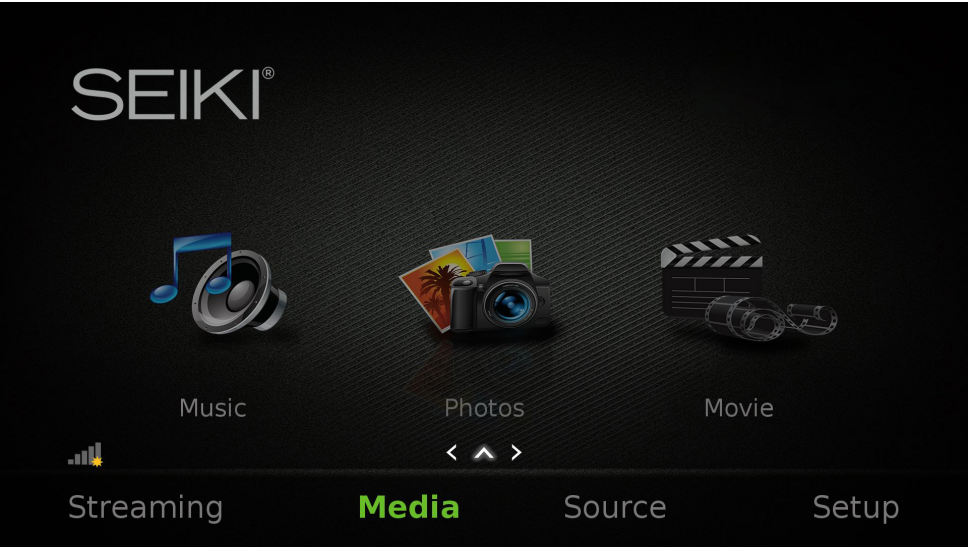

FAQs

GENERAL PROBLEMS WITH TV SET

PROBLEM	SOLUTION
No Power.	Make sure power plug is inserted correctly into power outlet.
No Picture.	Make sure the following is connected correctly <ul style="list-style-type: none">• Adjust the antenna• Move TV away from any products that may cause interference.• Autotune the unit again• Go to another channel
No sound or distorted sound	<ul style="list-style-type: none">• Make sure everything is connected correctly• Check if input settings for TV is correct• Audio settings are properly set• Make sure volume is not muted.• If earphones are connected, unplug them.• Adjust the volume
No operation can be performed with the remote control	<ul style="list-style-type: none">• Check the batteries are inserted correctly• Replace batteries if they have been used for awhile• Make sure to point remote control at the TV sensor and try again• Make sure you are not further then 6m away from TV.• Remote any obstacles that may be in the way of direct line of sight from remote control to the TV sensor.

SPECIFICATIONS

Display Device	50" 4K ULTRA HD SMART TV
Resolution	3840 x 2160
Display Colours	16.7M
Luminance	200cd/m2
Contrast ratio:	3500 : 1
Aspect Ratio	16 : 9
Multimedia Playback	Movie: avi/mpg/mov/ts/mkv/dat/mp4/vob/flv/3gp
Format under	Music: mp3/aac/m4a
USB Mode	Photo: jpg/jpeg/bmp/png
Power Source	100-240V ~ 50/60Hz
Power Consumption	≤115W
Dimensions	With stand: 1129 × 260 × 717 mm (w x d x h)
	Without stand: 1129 x 86 x 665 mm (w x d x h)
Weight	Net: 10.3 kg
	Gross: 13.05 kg

SEIKI™

CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd